

PREVENTIVE MAINTENANCE CHECK LIST

EVERY FUEL STOP

- Check crankcase oil level
- Check radiator water level
- Check water pump packing
- Visual inspection of engine

MONTHLY

- Check water pump for leaks and end play
- Check carburetor and fuel lines for leaks
- Inspect fan for cracks
- Check battery water level
- Check tire air pressure -34 lbs.
- Check tires for breaks, cracks, and abnormal wear
- Check radiator water level
- Check water pump packing
- Visual inspection of engine

EACH 500 MILES

- Lubricate in accordance with 500 mile Lubrication Chart
- Change crankcase oil
- Tighten accessory mountings (windwings)
- Inspect radiator hoses
- Check fan belt adjustment (See Service Adjustments)
- Check wiper blade rubber
- Check generator charging rate, adjust as required (See Service Adjustments)
- Check carburetor and fuel lines for leaks

EACH 1,000 MILES

- Do all 500 mile checks
- Test front wheel bearings for looseness (See Service Adjustments)
- Oil generator bushings at each end of generator
- Tighten spring U-bolts, front and rear.
- Tighten all wheel lug nuts (64 ft. lbs torque)
- Test all lights (head, tail, stop, dash, dome)
- Inspect all cotter pins (See cotter pin list)
- Wipe out light switch (End of steering column)
- Lubricate door hinges, striker plate, dovetails
- Inspect entire fuel system for leaks
- Inspect exhaust system for leaks
- Check steering wheel free play (2" max, See Service Adjustments)
- Check specific gravity of battery, charge if needed (See service and repair, Battery)
- Check for tight electrical connections at all harness connections.
- Check for tight coil connections
- Check for tight connections at ammeter and terminal box
- Check distributor point gap (.016 - .018) See Service Adjustments
- Clean battery posts and clamps, tighten battery ground connection

- Clean horn commutator
- Drain fuel sediment bowl
- Check clutch pedal for 1" free play. See Service Adjustments
- Check tail light lens mounting screws

EACH 2,000 MILES

- Do all 1,000 mile items
- Lubricate in accordance with 2,000 mile Lubrication Chart
- Inspect starter commutator and brushes
- Examine tires for wear, cracks and damage
- Adjust Service Brakes (See Service Adjustments)
- Inspect front leaf spring for sagging and cracks
- Repack top end of shock links
- Tighten differential banjo bolts

EACH 5,000 MILES

- Do all 2,000 mile items
- Test engine compression
- Tighten rear wheel axle nut
- Rotate tires
- Lubricate in accordance with 5000 mile Lubrication Chart
- Flush cooling system
- Lubricate speedometer cable

EACH 10,000 MILES

- Do all 5,000 mile items
- Pull all brake drums, inspect brake linings, drums, and springs
- Polish headlight reflectors